




# **Operation & Maintenance Guide**

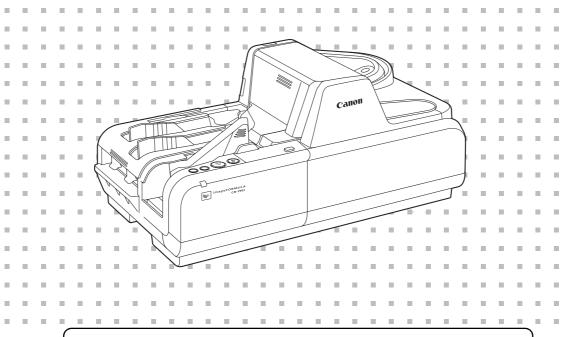

♦ Please read this manual before operating this scanner.

#### **■ FCC REGULATIONS (For 120V model)**

Check Reader, Model M111071/M111021

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
   Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success NY 11042, U.S.A.

Tel. No. (516)328-5000

#### ■ RADIO INTERFERENCE REGULATIONS (For 120V models)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Industry Canada.

# ■ RÈGLEMENT SUR LE BROUILLAGE RADIOÉLECTRIQUE (For 120V models)

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le materiel brouilleur: "Appareils Numériques", NMB-003 édictée par l'Industrie Canada.

#### ■ International ENERGY STAR® Office Equipment Program

As an ENERGY STAR<sup>®</sup> Partner, CANON ELECTRONICS INC. has determined that this machine meets the ENERGY STAR<sup>®</sup> Program quidelines for energy efficiency.

The International ENERGY STAR® Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment.



The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment, such as computers, monitors, printers, fax, machine, copiers, and scanners. The standards and logos are uniform among participating nations.

This model doesn't provide "setting options" for power management.

#### ■ European Union (and EEA) only.



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of

this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your locative office, waste authority, approved WEEE scheme or your household waste disposal service. For more information regarding return and recycling of WEEE products, please visit <a href="https://www.canon-europe.com/environment">www.canon-europe.com/environment</a>.

(EEA: Norway, Iceland and Liechtenstein)

#### ■ Für EMVG

Dieses Produkt ist zum Gebrauch im Wohnbereich, Geschäfts-und Gewerbebereich sowie in Kleinbetrieben vorgesehen.

#### Model Names

The following names may be provided for the safety regulations in each sales region of the Check Reader.

CR-135i: Model M111071 CR-190i: Model M111021

#### ■ Trademarks

- Canon and the Canon logo are registered trademarks of Canon Inc. in the United States and may also be trademarks or registered trademarks in other countries.
- · imageFORMULA is a trademark of CANON ELECTRONICS INC.
- Microsoft, Windows, Windows Vista, and Windows 7 are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Adobe, Acrobat, and Adobe Reader are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and other countries.
- Other product and company names herein are, or may be, the trademarks of their respective owners.
- · Ranger is a trademark of Silver Bullet technology, Inc.

#### ■ Copyright

Copyright 2010 by CANON ELECTRONICS INC. All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of CANON ELECTRONICS INC.

#### Disclaimers

The information in this document is subject to change without notice.

CANON ELECTRONICS INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXPECT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON ELECTRONICS INC. SHALL NOT BE LIABLE FOR ANY DIRECT. INCIDENTAL. OR CONSEQUENTIAL DAMAGES OF ANY NATURE.

CANON ELECTRONICS INC. IS NOT LIABLE FOR THE STORAGE AND HANDLING OF DOCUMENTS SCANNED WITH THIS PRODUCT, OR THE STORAGE AND HANDLING OF THE RESULTING SCANNED IMAGE DATA.

OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

IF YOU INTEND TO DISCARD THE ORIGINALS OF THE SCANNED DOCUMENTS, YOU ARE RESPONSIBLE FOR INSPECTING THE SCANNED IMAGES AND VERIFYING THAT THE DATA IS INTACT.

THE MAXIMUM LIABILITY OF CANON ELECTRONICS INC. UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY

### INTRODUCTION

Thank you for purchasing the Canon Check Reader CR-135i/CR-190i. Please read this manual thoroughly before using the machine in order to familiarize yourself with its capabilities, and to make the most of its many functions.

## Manuals for the CR-135i/CR-190i

The following manuals are provided with the CR-135i/CR-190i. Be sure to read these manuals thoroughly before using the scanner. (The Installation Guide and the Operation & Maintenance Guide are extracted from the Instructions.) Electronic manual is stored as a PDF file on the supplied Setup Disc and requires Adobe Reader to open. (You can download Adobe Reader from the Adobe Web site.)

#### Installation Guide (Supplied with the scanner/Electronic Manual)

Describes the procedure for setting up the CR-135i/CR-190i for scanning. Set up the CR-135i/CR-190i in accordance with the Installation Guide. For details on the CR-135i/CR-190i, refer to the Instructions (electronic manual).

#### Operation & Maintenance Guide (Supplied with the scanner/ **Electronic Manual): This Manual**

Describes the basic operations for using the CR-135i/CR-190i, troubleshooting, and maintenance. For details on the settings of the CR-135i/CR-190i, refer to the *Instructions* (electronic manual).

#### Instructions (Electronic Manual)

Describes how to use the scanner, and includes instructions for configuring the scanner settings, as well as handling, maintenance, and troubleshooting information.

## **Symbols Used in This Manual**

The following symbols are used in this manual to explain procedures. restrictions, handling precautions, and instructions that should be observed for safety.



#### **WARNING**

Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. To use the machine safely. always pay attention to these warnings.



#### A CAUTION

Indicates a caution concerning operations that may lead to injury to persons, or damage to property if not performed correctly. To use the machine safely, always pay attention to these cautions.



#### **M** IMPORTANT

Indicates operational requirements and restrictions. Be sure to read these items carefully to operate the machine correctly, and avoid damaging the machine.



### NOTE

Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

# **Table of Contents**

INTRODUCTION	4
Manuals for the CR-135i/CR-190i	
Symbols Used in This Manual	
Document Feeding and Scanning	
Documents	
Document	6
Envelope	7
Placing Documents	
Document Feeding and Scanning	
Scan Procedure	8
Troubleshooting	10
When the Scanner Is Not Recognized	
Clearing Paper Jams	10
Feeding Trouble	12
When the Scanned Image Is Not Normal	13
Maintenance	14
Daily Cleaning	14
Cleaning the Main Unit	14
Cleaning the Feed Path	14
Cleaning the Scanning Glass and Rollers	
Cleaning the Magnetic Heads	
Cleaning the Ink Jet Nozzles	
Cleaning with the Cleaning Cards (U.S.A. Only)	
Maintenance	
Replacing the Ink Cartridge	
Replacing the ink disposal tank	
Replacing the Rollers	
Adjusting the Separation Roller Gap	
Index	30

## **Document Feeding and Scanning**

This chapter describes precautions regarding documents that can be handled on this scanner and scanning operations.

### **Documents**

This section describes the types of documents that can be used and how to place them.




Treat the documents carefully. The paper edges may cut your fingers.

#### **Document**

The CR-135i/CR-190i can feed a wide variety of document sizes. The ranges of height and length for a document are:

Height: 2.7" to 4.3" (68 to 108 mm) Length: 4.7" to 9.6" (120 to 245 mm)

Thickness: 0.003" to 0.008" (0.08 to 0.20 mm) Weight: 17 to 40 lb bond (64 to 157 g/m<sup>2</sup>)

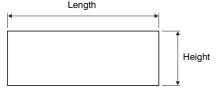

Follow these guidelines when you prepare a document for scanning:

- Before scanning documents that contain pasted artwork, make sure
  that the ink or paste is thoroughly dry. If the documents are scanned
  with wet ink or paste, the inside of the scanner may become dirty and
  it may cause a malfunction.
- If you scan a document written in pencil, the letters may not be scanned properly or the pencil may rub off onto the rollers and stain subsequent documents. Before you scan this kind of document, make a copy, and then scan the copy. After scanning a document written in pencil or some other soft writing material, be sure to clean the scanning rollers. (See "Cleaning the Scanning Glass and Rollers" on p. 16.)
- If you scan thin paper in the Duplex mode, the ink printed on the back side may be scanned. If this happens, adjust the scanning density.

- Scanning documents with a rough surface may not feed easily, and may cause friction between the documents, resulting in a feeding error. If this happens, feed the documents one by one.
- To avoid paper jams, damage to documents, and a scanner malfunction, do not feed the following types of paper into the scanner. If you want to scan these types of paper, first make a copy, and then scan the copy.



Wrinkled or creased paper



Curled paper



Torn paper



Paper with clips or staples



Carbon backed paper



Coated paper or fax recording paper



Extremely thin paper



Paper with binding holes



- Note that mixing documents of different thickness may cause a malfunction during feeding.
- Curled, wrinkled, or folded documents may cause an error. If this happens, straighten out the curls, or reduce the number of documents loaded.

### **Envelope**

You can also scan the envelope. When using separation OFF mode, you can scan an envelope with thickness up to 0.02" (0.5 mm) or weight up to 111 lb bond (413 g/m<sup>2</sup>).


### NOTE

- Disable the double feed detection function. (See "Using Ultrasonic Double Feed Detection," on p. 33 in Instructions.)
- If the envelope is not the first document in the batch, it may cause a feeding error or a paper jam.
- Some type of envelope may cause a feeding error or a paper jam.


### **Placing Documents**

Note the following points when placing documents on the scanner.


- · Place the front of the document toward you.
- Do not exceed the Load Limit Mark when placing documents in the document tray. This may cause feeding errors or paper jams.

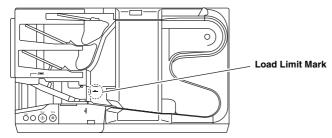

- A maximum of 250 documents can be loaded at one time.
- Move the stopper to the edge of the document in the document tray in accordance with the document. Otherwise, this may cause a paper eject error.

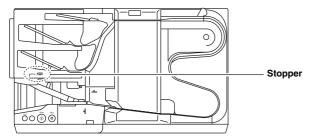

 Additional documents can be placed while the machine is scanning.

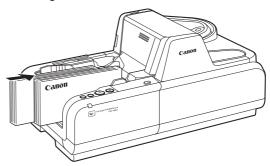

## **●** IMPORTANT

- Align the documents and set the bottom of the documents level in the document tray.
- Do not exceed the Load Limit Mark when placing documents. This
  may cause double feed error.

## **Document Feeding and Scanning**

This section describes how to load and scan documents.

### A CAUTION

- Avoid wearing loose fitting clothing, dangling jewelry, long ties, or long hair that could become entangled with moving parts, especially the rollers that feed paper through the scanner. If such objects become entangled, immediately disconnect the power plug from the power outlet.
- Check the paper stack and remove all clips, staples, pins, or any other type of metal or plastic fastener. These objects may cause damage to the document, a paper jam, or a scanner malfunction.
- Do not touch anything except the operation buttons when the jogger is operating (CR-190i only) or documents are being fed.
- Do not touch documents that are being fed under any circumstances. The documents that are being fed may cut your hand.

#### **Scan Procedure**

- Carefully align the edges of the document.
- Place the first page of the document facing you, and place the leading edge of the document into the scanner.




The remaining procedure differs depending on the scanner you are using.

For the CR-135i: Proceed to step 4 For the CR-190i: Proceed to step 3

# 3 (CR-190i only) If the documents are not aligned, press the JOG Button.

The jogger mechanism can be used to align documents.

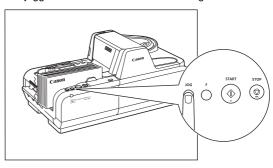

## **!** IMPORTANT

- If you press the JOG Button when a batch of documents of various sizes are loaded, the alignment will be incomplete, and the documents will not be scanned in the order loaded. If you are scanning documents of various sizes, align the leading edges of all the documents with the entry point of feeding.
- The jogger mechanism is not available for documents of less than 5.9" (150 mm) in length.

## NOTE

- The jogger does not work when the shutter is open. It occurs on the following conditions:
- The STOP Button is pressed and the scanning stops.
- There are documents on the document tray when a paper jam occurs.

Remove the documents from the document tray to close the shutter. If the jammed document remains or the Top Cover is removed, the jogger does not work.

 The jogger vibrates for 6 seconds, and then stops. Press the JOG Button to stop the jogger.

4 Adjust the Eject Stopper in accordance with the document.

## 5 Instruct scanning to start from the software application.

### NOTE

 When Using the Accompanying Scanning Utility for CR-135i/ CR-190i

There are three scanning methods as follows. Follow the each instruction.

#### Scan 1 page

Click [Scan Page] from the [File] menu.

#### Scan Batch to File

- ① Click [Scan Batch to File] from the [File] menu.
- 2 Input the File name, and then click [Save].
- 3 Select Simplex or Duplex, and then click [Start Scanning].


#### Scan Batch to Printer

- ① Click [Scan Batch to Printer] from the [File] menu.
- 2 Select Simplex or Duplex, and then click [Start Scanning].
- You can also start scanning with pressing the START Button.


## 6 Scanning starts.

### NOTE

 If "Sort Method" is set in the software application, the document will be ejected to one of the three Eject Pockets according to the sort methods that have been set.

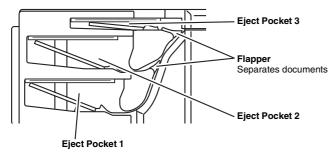


 When printing with the imprinter, ink may get on the leading edge of the document because the documents are ejected onto the printed surface.

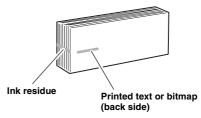

 When Using the Accompanying Scanning Utility for CR-135i/ CR-190i:

Scanning is suspended and a message is displayed when the Eject Pocket becomes full of documents. Scanning resumes when the documents are removed from the Eject Pocket (Eject Pocket full detection).

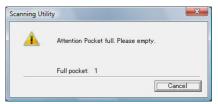

## **Troubleshooting**

This chapter describes the problems that might occur in the CR-135i/ CR-190i, and how to remedy them.

## When the Scanner Is Not Recognized

The following causes and remedies describe why your computer may not recognize the scanner.

Cause The Scanning Utility is not installed.

Install the Scanning Utility before connecting the Remedy

scanner to the computer. (See "Setting Up the Scanner,"

on p. 17 in Instructions.)

Cause The scanner is not correctly connected to the

computer.

Remedy Connect the scanner to the computer correctly. (See

"Connecting the Scanner to a Computer," on p. 20 in

Instructions.)

The USB interface provided as standard with your Cause

computer is not compatible with the scanner.

Remedy Not all USB interfaces provided as standard with

> personal computers are guaranteed. Contact your local authorized Canon dealer for more detailed information. (See "Checking Your Operating Environment," on p. 18

in Instructions.)

Cause USB cable is not compatible with the scanner.

Remedy Use the USB cable provided with the scanner. (See

"Checking Your Operating Environment," on p. 18 in

Instructions.)

Cause USB hub is not compatible with the scanner.

Remove the USB hub to use the scanner. (See Remedy

"Checking Your Operating Environment," on p. 18 in Instructions.)

## **Clearing Paper Jams**


If paper has jammed, open the Maintenance Cover and remove the iammed paper.

#### **A** CAUTION

- Be careful when you clear a paper jam. You may be injured unexpectedly. For example, the paper edges may cut your fingers, or the document may be damaged.
- Remove all jammed sheets of paper. Paper scraps left inside the scanner may cause a paper jam or malfunction.




Remove scanned documents from the Eject Pockets.

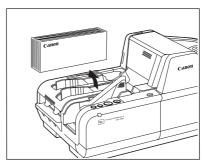


## Press and hold the START Button.

The jammed document is ejected into the Eject Pocket.

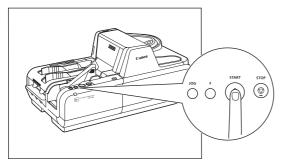


If the above procedure does not clear the paper jam, perform the following to remove the jammed document.


Pull the Open Button, and pull the Front Maintenance Cover open to the right and left.

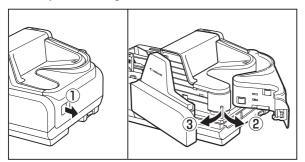


4 Press the Open Button, and push the Back Maintenance Cover open to the back.

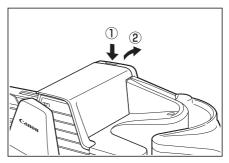

- 5 Remove the paper that has jammed.
- 6 Close the Back Maintenance Cover.

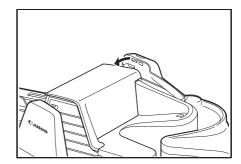

# Close the Front Maintenance Cover in the order shown in the diagram below.

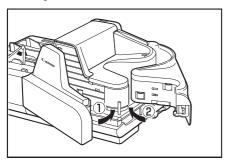

## **Feeding Trouble**

If the document is not fed properly or the detection functions do not work properly, remedy the problem by checking the following conditions.

#### Condition

#### A paper jam has occurred.

#### Cause and Remedy

- Check to make sure that the size and thickness of the document are within the supported range of the scanner, and if the quality of the paper is appropriate.
   For cautions on handling documents, see "Documents" on p. 6.
- Documents with rough surfaces may cause a paper feed error to occur.
   Scan one sheet at a time in the separation OFF mode.
- (See "Separation OFF Mode," on p. 37 in Instructions.)
  Dirty or worn rollers inside the scanner may cause a paper jam.
  - Clean the rollers if they are dirty. (See "Cleaning the Scanning Glass and Rollers" on p. 16.) Worn rollers must be replaced. Some rollers are replaceable. (See "Replacing the Rollers" on p. 26.) If the rollers are not replaceable, contact your local authorized Canon dealer or service representative to have the scanner serviced.
- The Separation Roller gap is too wide. Adjust the Separation Roller gap. (See "Adjusting the Separation Roller Gap" on p. 29.)

#### Condition

#### A double feed error often occurs.

#### Cause and Remedy

A double feed error may occur when documents with different thicknesses are mixed. If you are using the CR-190i scanner, you can align the documents using the jogger.

If the above-mentioned method is not effective or you are using the CR-135i scanner, adjust the Separation Roller gap. (See "Adjusting the Separation Roller Gap" on p. 29.)

#### Condition

### Cause and Remedy

#### MICR characters are not recognized correctly.

- The scanner cannot correctly read MICR characters if the magnetic heads are dirty. Clean the MICR magnetic heads. (See "Cleaning the Magnetic Heads" on p. 19.)
- If MICR characters cannot be recognized correctly after cleaning the heads, the MICR heads may be worn. Contact your local authorized Canon dealer or service representative to have the scanner serviced.
- The MICR text is on the back of the document. Load the side with the MICR characters face up in the document tray.

Other Causes  Some of the MICR characters are scratched or missing. Splattered MICR ink or toner may also be the problem.

## Condition

#### The imprinter is not printing correctly (missing imprint dots).

Cause and Remedy

Ink is clogged in the ink jet nozzle. Clean the ink jet nozzle. Cleaning the ink iet nozzle is recommended before using the CR-135i/CR-190i. (See "Cleaning the Ink Jet Nozzles" on p. 20.)

Other Causes The ink cartridge may be empty.

# Condition

## Cause and Remedy

#### Documents get dirty when using the imprinter.

Ink from the imprinter has been placed on the feed path. Clean the ink off the feed path. (See "Cleaning the Ink Jet Nozzles" on p. 20 and "Cleaning the Feed Path" on p. 14.)

## When the Scanned Image Is Not Normal

If there is a problem with the scanned image (the image is not sharp or stripes appear), one of the following conditions may be a probable cause. Check the following conditions, and take the appropriate action.

### The scanning glass or rollers are dirty.

If the scanning glass or rollers are dirty, the dirt will appear on the scanned image.

Clean the scanning glass and rollers. For details, see "Cleaning" the Scanning Glass and Rollers" on p. 16.

### The scan conditions are inappropriate.

If the scan conditions are inappropriate, the scanned image will not be sharp or will appear as dark.

▶ Check the brightness and other scanner settings.

If the scanned image is blurry or the document has not been scanned at all, the brightness may be set too high. If the scanned image appears dark, the brightness may be set too low.

Also, check the settings on the driver and the software application.

#### The driver or application does not run correctly.

If the document cannot be scanned correctly even if the scan conditions are adjusted, the driver or the application may not be functioning correctly.

▶ Reinstall the driver or application.

For details on how to install the driver, see "Installing the Software," on p. 19 in Instructions.

For details on how to install the application, see the applications instruction manual.

#### Other Causes

Even if the computer may be recognizing the scanner correctly, and the driver and the application is installed correctly, scanning may not be performed correctly. If this happens, the interface card is not compatible. Use the recommended interface card.

If the above remedies do not rectify the problem, contact your local authorized Canon dealer or service representative to have the scanner serviced.

## **Maintenance**

This chapter describes how to clean and maintain the scanner.

## **Daily Cleaning**


To ensure high-quality image scanning, regularly clean your CR-135i/ CR-190i as described below.

## **A** CAUTION

- Before you clean the scanner, turn OFF the scanner and computer, and disconnect the power cord from the power outlet. Otherwise, it may cause an electrical shock.
- Never clean the scanner with any kind of organic solvent, such as alcohol, benzene, or paint thinner. This may cause a fire and electrical shock, or cause the exterior of the scanner to disfigure or discolor.
- Never spray mild detergent or water directly on the scanning glass. The spray could penetrate below the glass and contaminate the internal light source and lenses.

## **Cleaning the Main Unit**


Wipe the scanner with a firmly wrung cloth, moistened slightly with water or mild detergent. Then, wipe off with a clean, dry cloth.

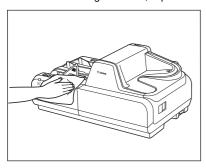

## **Cleaning the Feed Path**

If dirt appears on scanned documents, clean the feed path. Clean the feed path regularly.


Pull the Open Button, and pull the Front Maintenance Cover open to the right and left.

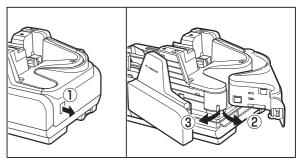


## IMPORTANT

If you notice paper dust in the feed path when you open the Maintenance Cover, clean it out with a clean dry cloth or cotton swabs.


Press the Open Button, and push the Back Maintenance Cover open to the back.

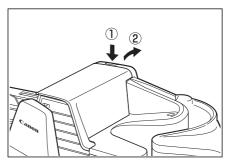


Wipe the feed path with a firmly wrung cloth, moistened slightly with water or mild detergent. Then, wipe off with a clean, dry cloth.

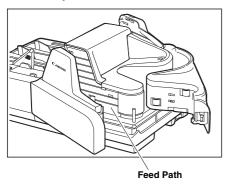

4 Close the Back Maintenance Cover.

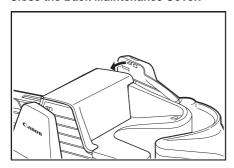


Close the Front Maintenance Cover in the order shown in the diagram below.

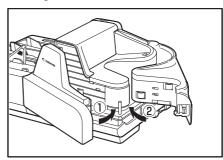


## **Cleaning the Scanning Glass and Rollers**

If stripes appear on scanned images or if dirt appears on scanned documents, clean the scanning glass and rollers. Clean the scanning glass and rollers regularly.

Remove the Top Cover.

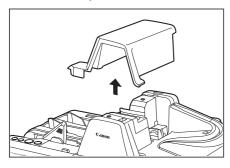


Pull the Open Button, and pull the Front Maintenance Cover open to the right and left.

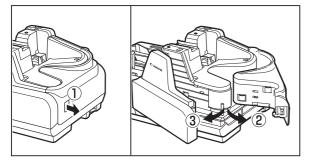


IMPORTANT

If you notice paper dust in the feed path when you open the Maintenance Cover, clean it out with a clean dry cloth or cotton swabs.

Press the Open Button, and push the Back Maintenance Cover open to the back.

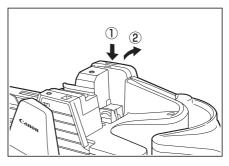


Remove the Roller Cover.

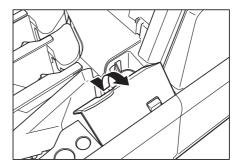

# 5 Spin the rollers while wiping them clean with a firmly wrung cloth dampened with water or a mild detergent.


There are 26 roller positions, as shown in the diagram below.

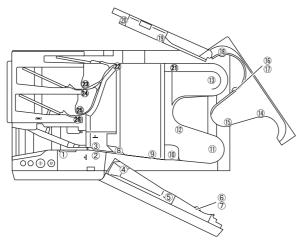


## NOTE

- Use cotton swabs to clean the rollers in locations that are too narrow for your fingers.
- Roller in position ③ is turned by the roller in position ①. Turn the roller in position ① to wipe the rollers.
- Rollers in positions (a), (b), and (c) are turned by the roller in position (f). Turn the roller in position (f) to wipe the rollers.
- Rollers in positions ② to ② are turned by the roller in position ③. Turn the roller in position ③ to wipe the rollers.
- Rollers in positions ① to ③ are replaceable. (See "Replacing the Rollers" on p. 26.)


# **6** Use a clean dry cloth to clean the entire scanning glass.

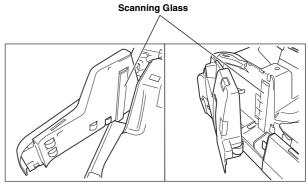


### 7 Close the Back Maintenance Cover.

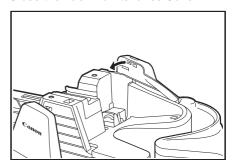


# Close the Front Maintenance Cover in the order shown in the diagram below.

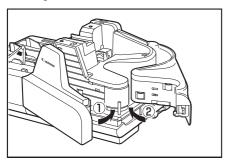

## 9 Replace the Roller Cover.

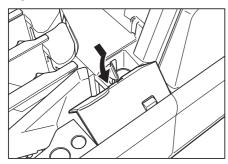

# 10 Carefully replace the Top Cover.

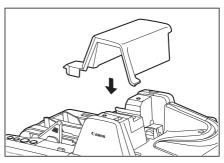


## **●** IMPORTANT

If paper jams and double feeds (two papers being fed at the same time) still occur after cleaning the rollers, the rollers may be worn. The rollers need to be changed. Some rollers are replaceable. (See "Replacing the Rollers" on p. 26.) If the rollers are not replaceable, contact your local authorized Canon dealer or service representative to have the scanner serviced.

## **Cleaning the Magnetic Heads**

If the magnetic heads are dirty, then MICR characters cannot be scanned correctly. Periodically, clean the magnetic heads with a commercially available audio head cleaner.

Pull the Open Button, and pull the Front Maintenance Cover open to the right and left.

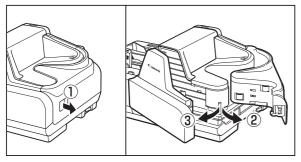


## **●** IMPORTANT


If you notice paper dust in the feed path when you open the Maintenance Cover, clean it out with a clean dry cloth or cotton swabs.

Use a commercially available audio head cleaner to clean the magnetic heads.

The magnetic heads are located in the positions shown in the diagram below.

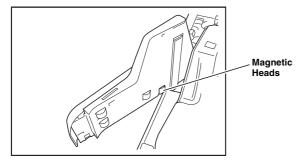


Close the Front Maintenance Cover in the order shown in the diagram below.

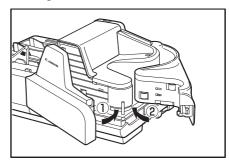

## **Cleaning the Ink Jet Nozzles**

Ink that collects around the ink jet nozzles may stain your documents or cause the text or bitmap to appears as scratched. Clean the area around the ink jet nozzles periodically. Cleaning the ink jet nozzles is also efficient action when the printed text or bitmap becomes faint.


Remove the Top Cover.

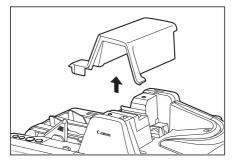

- **2** Remove the ink cartridge.

  For more information, see "Replacing the Ink Cartridge" on p. 22.
- Use the Built-in Nozzle Cleaning Pad to remove the ink from around the ink jet nozzles.

Swipe the ink cartridge 2 or 3 times on the Built-in Nozzle Cleaning Pad shown in the diagram below. If the text or bitmap still appear faint after this operation, replace the ink cartridge (See "Replacing the Ink Cartridge" on p. 22.)

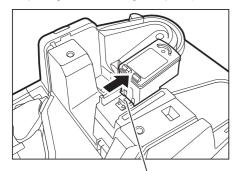


**Built-in Nozzle Cleaning Pad** 

4 Set the ink cartridge.

For more information, see "Replacing the Ink Cartridge" on p. 22.

5 Carefully replace the Top Cover.

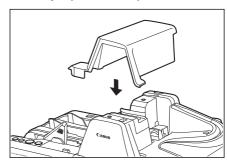


# Cleaning with the Cleaning Cards (U.S.A. Only)

If a black stripe appears on the back-side of scanned images or if dirt appears on the paper documents upon scanning or for preventative measures, we recommend that you clean your Canon CR-Series scanner as needed with a cleaning card. Using a cleaning card will minimize the frequent cleaning as instructed in this manual.

It is best to perform a cleaning at beginning or end of the day. A cleaning card does not clean the ink jet nozzles, so please remove the ink cartridge and perform a nozzle cleaning (See "Cleaning the Ink Jet Nozzles" on p. 20.)

## **!** IMPORTANT

- This operation is for U.S.A. Cleaning cards are available only in U.S.A.
- Contact your local authorized Canon dealer or service representative for the available cleaning card.
- 1 Turn OFF the scanner.
- **2** Disconnect the scanner and the computer.
- 3 Turn ON the scanner with pressing the START Button and the STOP Button.

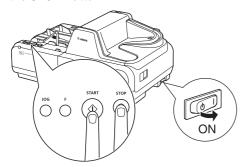

NOTE

If the scanner turned ON properly, the power LED continues to flash.

- 4 Pull the Eject Stopper.
- 5 Place the cleaning card in the document tray.



- 6 Press the START Button to start cleaning.
- Please repeat steps 5 and 6.
  A typical cleaning is feeding the cleaning card 3 to 7 times. If the scanner is extremely dirty, you may need to use another cleaning
- 8 Turn OFF the scanner.
- 9 Connect the scanner and the computer.
- NOTE

card.

- You cannot scan the document without the computer.
- Allow 1 to 2 minutes for the moisture on the Canon CR-Series scanner from the cleaning card to thoroughly dry before scanning documents.

### **Maintenance**

Make the following adjustments to maintain scanning quality.

## **Replacing the Ink Cartridge**

The ink cartridge needs to be replaced if the printed text becomes scratchy or faint even if you have cleaned the ink jet nozzle. The ink cartridge is not included with the scanner. Purchase an ink cartridge separately, as shown below.


#### Compatible ink cartridges:

Region	Canon Ink Cartridge PG-50 Black	Canon Ink Cartridge PG-40 Black
Europe and Oceania	0616B001	0615B001
Americas	0616B002/0616B005	0615B002/0615B005
Asia	0616B003	0615B003


## **!** IMPORTANT

- These ink cartridges are available for 5 years after production has stopped.
- The ink disposal tank must be replaced when the ink cartridge is replaced.
- To replace the ink cartridge, turn the scanner OFF before removing the Top Cover. After the ink cartridge is set, replace the Top Cover, and then turn the scanner back ON.
- Finish up the unpacked ink cartridge as soon as possible. More frequent cleaning of the ink cartridge is required if long time elapses after unpacking.


## 1 Remove the Top Cover.

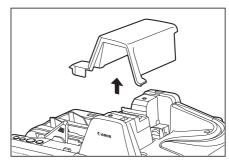

# 2 Squeeze the Print Position Adjustment Lever, and lift it up to the top position.

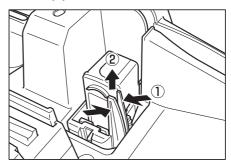


# 3 Push the ink cartridge backward, and then remove the ink cartridge.

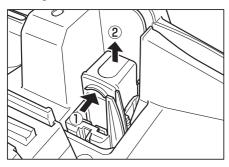

## **A** CAUTION

Do not touch the ink jet nozzle right after imprinting. The nozzle may be very hot.

## 4 Place the ink cartridge shown in the diagram below.

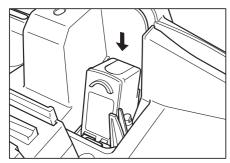


## **A** CAUTION

Do not touch the electrical contact on the carriage. Doing so may cause a malfunction.

## NOTE

Do not use more than one cartridge by rotation. If you do so, applications cannot check the ink level precisely.


# 5 Push down the ink cartridge until it clicks into place.

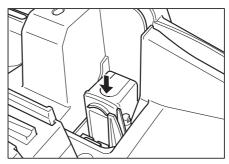

## **M**IMPORTANT

Make sure that the ink cartridge is securely in place.

# **6** Squeeze the Print Position Adjustment Lever and move it to adjust the print position.

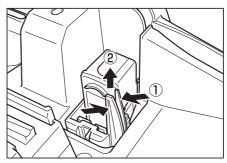


Top:

1.92" (48.8 mm) from the bottom edge of the document Bottom:

1.17" (29.6 mm) from the bottom edge of the document

## **7** Carefully replace the Top Cover.

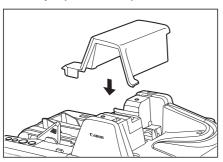

## Replacing the ink disposal tank

When the following conditions appear, you have to replace the ink disposal tank according to the following procedure.


- When the ink cartridge is replaced.
- When clumpy ink appears on the ink disposal tank as shown below.



The replacement ink disposal tank is not included with the scanner. Purchase an ink disposal tank, as shown below.

Compatible ink disposal tank: 4623B002

## 1 Open the Ink Disposal Tank Pocket.

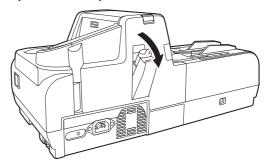

# Remove the ink disposal tank.




## **WARNING**

Do not print without the ink disposal tank. Doing so may cause a malfunction.


## NOTE

- Be careful not to get dirty with ink.
- When you discard the ink disposal tank, put it in the plastic bag in the box of the ink disposal tank.

## Attach the ink disposal tank.

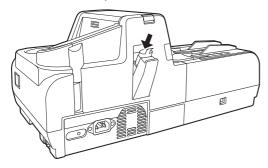

## 4 Close the Ink Disposal Tank Pocket.

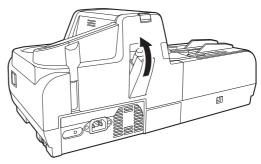

## **Replacing the Rollers**


When rollers are worn, paper jams and double feeds tend to occur. You can replace the rollers (Pickup Roller, Feed Roller, and Separation Roller) according to the following procedure.

The exchange roller kit is not included with the scanner. Burchase a


The exchange roller kit is not included with the scanner. Purchase an exchange roller kit separately, as shown below.

Compatible exchange roller kit: 4623B001


# Remove the Top Cover.

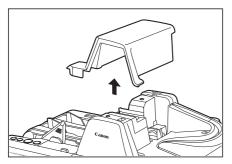


# Remove the Roller Cover.

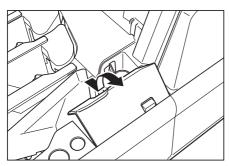

# Open the Feed Supporter to the left.

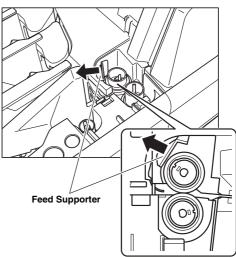


# 4 Pinch the Separation Roller at the rim and the fixing lever, and then remove it with pressing the Separation OFF Mode Button.

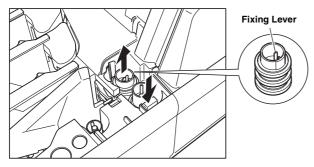


## NOTE


If the Separation Roller is not removed easily because of the fixing lever position, turn the Pickup Roller in anticlockwise direction by hand.

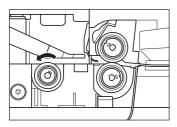

# Pinch the Feed Roller at the rim and the fixing lever, and then remove it.

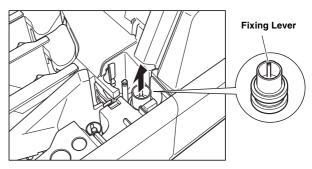


# Pinch the Pickup Roller at the rim and the fixing lever, and then remove it.

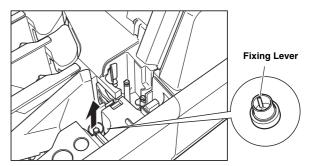

## NOTE

If the Pickup Roller is not removed easily because of the fixing lever position, turn the Pickup Roller by hand.


## 7 Attach the Pickup Roller.

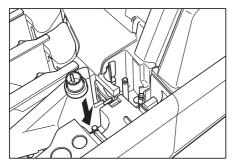

## IMPORTANT

Push down the roller until it clicks into place.


# Attach the Feed Roller. Align the notch on the roller axis with the hole on the roller.

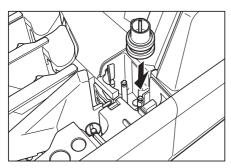

## **●** IMPORTANT

Push down the roller until it clicks into place.


# **9** Attach the Separation Roller with pushing the Separation OFF Mode Button. Align the notch on the roller axis with the hole on the roller.

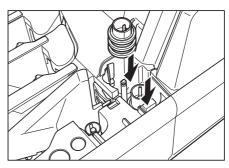


## **M**IMPORTANT

Push down the roller until it clicks into place.


# 10 Close the Feed Supporter to the right.

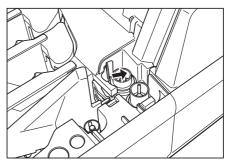

# 11 Replace the Roller Cover.

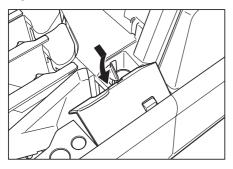

## 12 Carefully replace the Top Cover.

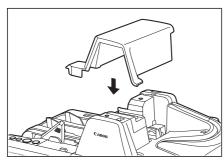


Adjust the Adjustment Dial to 5.

For more information, see "Adjusting the Separation Roller Gap" on p. 29.

## **Adjusting the Separation Roller Gap**

If double feed should occur too often, adjust the Separation Roller gap according to the following procedure.


## Slide the Adjustment Dial Cover to the left.

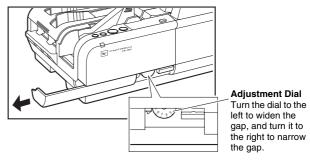

# Adjust the Adjustment Dial.

Turn the Adjustment Dial to the right 3 clicks. If documents are not fed after the above operation, turn the Adjustment Dial back to the left 1 click.

## 3 Slide the Adjustment Dial Cover to the right.

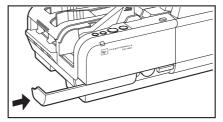

## **A** CAUTION

Do not use the Adjustment Dial any other time except when adjusting the Separation Roller gap. Turning the Adjustment Dial too much may damage the scanner.

# Index

Α	
	Adjusting the Print Position
	Adjustment Dial
	Amount loaded
В	
D	D. 11.1. N
	Built-in Nozzle Cleaning Pad
C	
	Cleaning
	Feed path14
	Main unit14
	Cleaning Card
_	ŭ
D	D " OL '
	Daily Cleaning
	Documents
	Document
	Envelope7
	How to place documents7
Ε	
	Eject Pocket9
	Eject Stopper7
F	
г	5 " T II
	Feeding Trouble
	Flapper
ı	
	Ink Cartridge
	Ink Disposal Tank
	Ink Jet Nozzle
J	
J	IOO Dutter
	JOG Button
L	
	Load Limit Mark7
M	
	Magnetic head
	Maintenance 22
	ivialitieriarioe
N	
	Number of pages loaded 7

P	
Print Position Adjustment Lever	22
R	
Rollers	16, 26
S	
Scanning Glass	16
Separates documents	9
Т	
Troubleshooting	10

# Canon

#### CANON ELECTRONICS INC.

1248, SHIMOKAGEMORI, CHICHIBU-SHI, SAITAMA 369-1892, JAPAN

#### CANON U.S.A. INC.

ONE CANON PLAZA, LAKE SUCCESS, N.Y. 11042, U.S.A.

#### CANON CANADA INC.

6390 DIXIE ROAD, MISSISSAUGA, ONTARIO L5T 1P7, CANADA

#### CANON EUROPA N.V.

BOVENKERKERWEG 59-61, P.O.BOX 2262, 1180 EG AMSTELVEEN, THE NETHERLANDS

#### CANON LATIN AMERICA, INC.

703 WATERFORD WAY, SUITE 400 MIAMI, FLORIDA 33126, U.S.A.

#### **CANON SINGAPORE PTE. LTD.**

1 HARBOUR FRONT AVENUE #04-01, KEPPEL BAY TOWER, SINGAPORE 098632

#### CANON HONGKONG COMPANY LTD.

19TH FLOOR, THE METROPOLIS TOWER, 10 METROPOLIS DRIVE, HUNGHOM, KOWLOON, HONG KONG.

#### CANON KOREA BUSINESS SOLUTIONS INC.

168-12 SAMSEONG-DONG, GANGNAM-GU, SEOUL, KOREA